

 

Canon VIXIA HG21 Camcorder Basic Instructions

Turning camcorder on/off:

- Press “ON/OFF” button on top left of camcorder



Switching between recording and playback modes:

- Set mode dial on back right of camcorder to  for **Recording** and to  for **Playback**




Recording Video:

- With camcorder in Recording mode, press circular button in middle of mode dial to start and stop recording



Downloading video to computer:

- Plug in camcorder power adapter
- Connect USB cable to camcorder USB terminal () located on left side of camcorder



- Connect USB cable to computer
- Turn camcorder **ON** and switch to **Playback** mode
- Follow computer program instructions for importing video

Deleting recordings from camcorder:

- Turn camcorder **ON** and switch to **Playback** mode
- Select desired scene by using **Joystick** to left of LCD screen



- Press **FUNC.** button underneath LCD screen
- Use **Joystick** to navigate menu options to “**Delete**” (trash can icon)
- Push **SET** in middle of **Joystick**
- Select desired delete option (“**All Scenes**”, “**All Scenes (this date)**”, or “**This Scene**”) and push **SET**
- Confirm delete by selecting “**Yes**” and pushing **SET**

Contact [Christine Moore](#) for additional help