

Ladibug (Lumens) Document Camera

Keypad Functions



Power: Switch the document camera on and off.




Source: Select between the internal or external memory and other sources connected to the document camera and select which captured images and videos to show.



Lamp: Switch the lamp(s) on and off to create desired light levels.



Auto Tune: Adjust the image automatically by tuning the brightness, contrast, color balance, exposure and focus.*

*Not available for the DC133



Zoom: Zoom the camera lens in (+) and out (-) from the image, and select the stored images in the internal memory by pressing up or down arrows.



Brightness: Control the image brightness and select stored images in the internal memory by pressing the right or left arrow button.




Menu: Open the menu and control display, storage, settings, and advanced features.



Rotate: Use to rotate the image 90,180, or 270 degrees and back to original position. *



Pan: Automatically zoom from full page to each of four separate page quadrants (top left, bottom left, top right, bottom right).*

* Only available for DC265, all others models include half-page mode, which zooms between the top and bottom halves of a page.




Enter: Select your image and any menu function.



Freeze: Freeze a moving image.



Record: Start and end the audio/video recording. *

*Only available for DC265. The DC166 records video without audio.



Capture: Capture live images and automatically store in the internal memory.



Delete: Delete selected images.