

 

 



 

 







Starboard Function Buttons

Symbol	Description	Symbol	Description
	Hides/displays the StarBoard Software Toolbar.		Select Marker Pen.
	Add a new blank page.		Switch to PC Operation.
	Show previous page.		Select Eraser.
	Show next page.		Select Clear
	Hides/displays the Topic List.		Select
	Select Solid Pen. Black.		Select Exit
	Select Solid Pen. Red.		Programmable1
	Select Solid Pen. Blue.		Programmable2

Starboard Stylus Pen

The stylus pen has one pen tip button, and two side buttons. Mouse actions can be assigned to these three buttons. The default button settings are summarized in the following table.

Button	User action	Corresponding mouse action (Windows)	Corresponding mouse action (Mac)
Pen tip	Press the pen tip against the display.	Mouse left-click	Primary mouse button click
Side Button No. 0	Press the button with the pen tip slightly removed from the screen (5 mm or less).	Mouse left double-click	Primary mouse button double click
Side Button No. 1	Same as above.	Mouse right-click	Secondary button click

